PD7000 PROVU[®] Dual-Line 6-Digit Temperature Meter




- J, K, T, E, R, S, B, N, C Thermocouples
- 100 or 1000 Ω Platinum, 10 Ω Copper, 120 Ω Nickel RTDs
- 1° or 0.1° Resolution
- Averages up to 10 RTD Sensors
- Automatic Cold Junction Compensation
- NEMA 4X, IP65 Front
- Universal 85-265 VAC or 12-24 VDC Input Power
- Large Dual-Line 6-Character Display, 0.60" & 0.46"
- Programmable Displays & Function Keys
- Optional SunBright Display Models for Outdoor Applications
- 2 or 4 Relays + Isolated 4-20 mA Output Options
- External 4-Relay & Digital I/O Expansion Modules
- RS-232, & RS-485 Serial Communication Options
- Modbus[®] RTU Communication Protocol Standard
- On-Board Digital Input
- Onboard USB and MeterView[®] Pro Programming Software



PRECISION DIGITAL CORPORATION

PD7000 PROVU® Dual-Line 6-Digit Temperature Meter

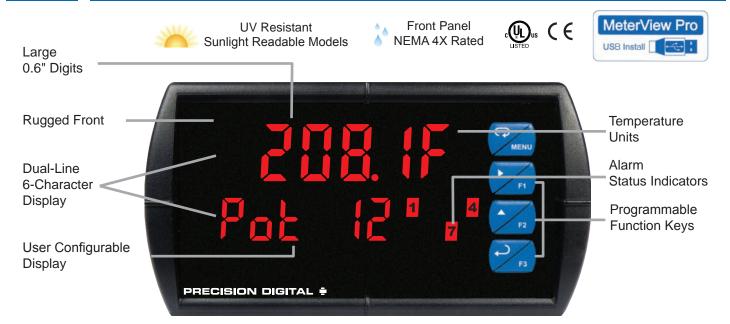

INTRODUCTION

The PROVU PD7000 temperature meter boasts specifications and functionality that clearly makes it one of the most advanced temperature meters available. Its dual-line 6-character display, function keys, and optional expansion modules are only a few of the special features available on the PROVU.

Versatile

The PD7000 accepts many more thermocouple types and RTDs than earlier models. It can be configured to have either a 1° or 0.1° display resolution on any type of sensor input. The lower display makes configuration simpler. The display itself is quite configurable. There are many relay functions for up to 8 relays; including an Interlock Relay function. The 4-20 mA output can represent up to 12 different parameters/variables. This makes the PD7000 one of the most versatile meters on the market.

FRONT PANEL DISPLAY

Precise, Accurate, and More Informative

PROVU's large 0.6" upper display provides an accurate and precise 4 or 5-digit view of the temperature measurement.

Configurable

The upper display can be programmed to indicate current temperature, maximum or minimum temperature, alternating maximum/minimum temperatures, one of eight alarm set points, or Modbus input. The lower display can also be configured to display engineering units, set points, user defined legends, or simply turned off.

Function Keys

There are three function keys available to the user. These keys can be programmed to trigger certain events (i.e. acknowledge alarms, reset max and/or min, disable/enable output relays, or hold current relay states), provide direct menu access points, and more.

Learn more about using the PRoVU's Function Keys by watching a video at predig.com/videos



Standard LED and Optional SunBright LED Display Models

The PROVU'S standard and SunBright display models feature extraordinarily bright LED displays. They are perfect for indoor and outdoor applications where visibility may be impaired by smoke, fog, dust, or distance. The intensity on the SunBright display model is so high it can be read even in the brightest sunlight.

Free USB Programming Software & Cable

The PROVU® comes preloaded with free **MeterView® Pro** programming software that connects and installs directly to your PC with a standard USB cable, also provided free with each instrument. This eliminates the need to insert CDs, install drivers, or download software from the internet. The software will allow you to configure, monitor, and datalog a PROVU® PD7000 using your PC. Just simply connect the meter to your PC with the USB cable and within minutes you will be programming it.



Easy to Use

The user friendly dual-line display makes the PROVU easy to set up & program. Input selection and configuration are conveniently set up via rear switches and front panel programming. Three levels of password protection help maintain the reliability of the programming.

	2
rco	2
ի հերություն	
PRECISION DIGITAL	

Input Setup



Display Setup

www.predig.com

PRECISION DIGITAL =

PD7000 PROVU[®] Dual-Line 6-Digit Temperature Meter



Rugged

A unique front panel design makes the PROVU nearly impenetrable in typical applications. Here, the PROVU easily survives a direct hit on the display from a heavy 2" solid stainless steel ball dropped from eight feet.

 
Three Tier Password Protection

The PROVU offers 3 levels of password protection:

- Level 1 protection allows the operator use of only the 3 preconfigured function keys on the front panel without a password.
- Level 2 protection allows the operator use of only the function keys and the ability to change set points without a password.
- Level 3 protection restricts the operator from using the function keys and all meter configuration menus without a password.

On-Board Digital Input

The PD7000 includes a digital input as standard. This digital input can operate with the tare, reset tare, or interlock relays feature, force relays on from a signal from a PLC or relay on other equipment, and much more. This is ideal for installations where the meter is inaccessible behind a cover, or where an additional function key is needed for customized operation.



Rounding

The rounding feature is used to give the user a steadier display with fluctuating signals. It causes the display to round to the nearest value according to the rounding value selected (1, 2, 5, or 10). For example, with a rounding value of 10, and a input of 12346, the display would indicate 12350.

Max/Min Display

Max/Min (or Peak/Valley) is standard on the PROVU PD7000. Either display can be configured to show either maximum or minimum excursion since last reset. The displays can also be configured to toggle between Max and Min values. Both values can be simply reset from the front panel.

DIGITAL COMMUNICATIONS

Modbus[®] RTU Serial Communications

With the purchase of a serial communication adapter, PROVU meters can communicate with any Modbus Master device using the ever-popular Modbus communications protocol that is included in every PROVU. This greatly increases the flexibility of the meter. Modbus provides much more capability than read PV and write set points.





Modbus PV Input

MULTIPLE SENSOR AVERAGING

The PD7000 can find the average temperature of up to 10 RTD probes connected in parallel. This new calculated value would then be treated as the PV (temperature) displayed on the meter. The average temperature is also available via Modbus communications and as the retransmitted value for the optional 4-20 mA output.

METERVIEW® PRO SOFTWARE

Configure, monitor, and datalog a PD7000 from a PC using Meter View Pro Software (available with each PRoVu meter via USB or for download at www.predig.com).

	MeterView Pro Monitor and File PC Port Setup Custor				
	Meter ID 247	and an and the local data and th		Log Settings	
	Meter ID 247				
	Reactor#	6 Temp		Interval Units 10 Seconds V	
	The de			lo decords	
D.		1075 D	a F	Start Pauce	
\mathbf{O}	100		-9 ·	and the second	
Monitor & Datalog	Maximum	Temp			
Ξ.	Maximun				
^{co}		1118 D	eg F		
			ag r		
.*					
∞	Minimum	Temp			
<u> </u>		000			
0		998 D	eg F		
		10	- I		
	Alarm Statu	•			
0					
\geq					
	PRECISION				
		Status			
		STATUS			
	-				
	🖲 MeterView Pro Monitor	and log		56	X
	MeterView Pro Monitor File Noritor PC Part Setuo		_	56	×
Ì	File Monitor PC Part Setup	About	_	56	
ľ	Pile Hontor PC Port Setup Setup Relays Advanced Featu	About		00	
	Pie Montor PCPortSetup Stiluo Relays Advanced Feat	About ee			
	File Munitor PC Part Setuo Setuo Relaya Advanced Featu PD7000 Setup Input Type	About no		- Manual Control Menu	
	Pie Montor PCPortSetup Stiluo Relays Advanced Feat	About es	Engineering Links	Manual Control Menu	
	File Munitor PC Part Setuo Setuo Relaya Advanced Featu PD7000 Setup Input Type	About es Deplay	tEnP	- Manual Control Menu	
	Pie Nonter PCPartSetau Setuo Relays Advanced Feat. PD7000 Setup Input Type O Themocouple	About The Deplay	15mP Deplay Intensity	Manual Control Menu	
đ	Pie Nonter PCPartSetuo Smo Relays Advanced Feat. PD70000 Setup page Type O Themocouple © RTD	About The second secon	tEnP	Hansal Control Menu Odput Test Messa Oscol 4.000 mA - Relay and Digital Ost Test	
tup	Pie Monte PC Per Seke Srius Reise Advanced Feel PD7000 Setap - legit Type O Themocupie O Themocupie ISC Orn (195) -	About The play	15mP Deplay Intensity	Manual Control Manu Output Tree Image Output 4000 mA Pelery and Digital CM Test Frace ON Party Dig Od Frace ON	
etup	Pie Hanter PCPertSeta Small Reign Advanced Fear PD2000 Setup Prove Type O Themocode © RTD TC Type 100 Cm85 Deg C or F	Aboot ** Main Daglay	15mP Deplay Intensity	Manual Cartesi Menu Odaju Test Heling Odovi 4.000 mA Reference Objetal Out Test Reference Objetal Out Test Force ON Farce ON	
Setup	Pile Hunter PCPertSeta Sm.0: Relige Adamond Fear PO2000 Setup - Pear Type O Themocopile © RTD TC Type 100 CPC 1050 N	About The set of the s	15mP Deplay Intensity	Marsal Croted Merry Odjud Test Margo Chail (400) mA Peter and Digital Out Test Peter and Digital Out Test Peter Dig Out Peter Out	
Setup	Pie Hanter PCPertSeta Small Reign Advanced Fear PD2000 Setup Prove Type O Themocode © RTD TC Type 100 Cm85 Deg C or F	About The set of the s	IEnP Deplay Intensity 8 w	Manual Control Manu Output Tree Integrand Data Out Test Paley and Data Out Test Frace On O	
Setup	Pie Menter PCPertSetar Seta Resp Adversed Fear PD7000 Setup Prove Type O Thermocopie O RTD TC Type Did Com p15) Dig C or F Dig S Did Com Pret	About The set of the s	IEnP Deplay Intensity 8 w	Marsal Croted Merry Odjud Test Margo Chail (400) mA Peter and Digital Out Test Peter and Digital Out Test Peter Dig Out Peter Out	
Setup	Per New PCPrrtisto Site Intern Avenue free PD7000 Setup C Personal PD7000 Setup C Personal PD7000 Setup C Personal Des Cer F Des Cer F Doctant Pert _ Terpetar	About The set of the s	IEnP Deplay Intensity 8 w	Manual Control Manu Output Tree Integrand Data Out Test Paley and Data Out Test Frace On O	
Setup	Pie Menter PCPertSetar Seta Resp Adversed Fear PD7000 Setup Prove Type O Thermocopie O RTD TC Type Did Com p15) Dig C or F Dig S Did Com Pret	About The set of the s	IEnP Deplay Intensity 8 w	Manual Control Manu Output Tree Integrand Data Out Test Paley and Data Out Test Frace On O	
Setup	Per New PCPrrtisto Site Intern Avenue free PD7000 Setup C Personal PD7000 Setup C Personal PD7000 Setup C Personal Des Cer F Des Cer F Doctant Pert _ Terpetar	About The set of the s	IEnP Deplay Intensity 8 w	Manual Control Manu Output Tree Integrand Data Out Test Paley and Data Out Test Frace On O	
Setup	Per New PCPrrtisto Site Intern Avenue free PD7000 Setup C Personal PD7000 Setup C Personal PD7000 Setup C Personal Des Cer F Des Cer F Doctant Pert _ Terpetar	About The set of the s	IEnP Deplay Intensity 8 w	Manual Control Manu Output Tree Integrand Data Out Test Paley and Data Out Test Frace On O	
Setup	Per New PCPrrtisto Site Intern Avenue free PD7000 Setup C Personal PD7000 Setup C Personal PD7000 Setup C Personal Des Cer F Des Cer F Doctant Pert _ Terpetar	About The set of the s	IEnP Deplay Intensity 8 w	Manual Control Manu Output Tree Integrand Data Out Test Paley and Data Out Test Frace On O	
Setup	Per New PCPrrtisto Site Intern Avenue free PD7000 Setup C Personal PD7000 Setup C Personal PD7000 Setup C Personal Des Cer F Des Cer F Doctant Pert _ Terpetar	About The set of the s	IEnP Deplay Intensity 8 w	Manual Control Manu Output Tree Integrand Data Out Test Paley and Data Out Test Frace On O	
Setup	Per New PCPrrtisto Site Intern Avenue free PD7000 Setup C Personal 0 Remote 0 RTD 10 Set 1 10 Set 1 0 Remote 0 RTD 10 Set 1 0 Remote 10 Set 1 0 Remote 10 Set 1 0 Remote 10 Set 1 10 Set	About The set of the s	IEnP Deplay Intensity 8 w	Manual Cantrol Manu Output Treat Integrand Data 0.4 Treat Relay and Data 0.4 Treat Frace ON Force ON O ON Force ON	
Setup	Per New PCPrrtisto Site Intern Avenue free PD7000 Setup C Personal 0 Remote 0 RTD 10 Set 1 10 Set 1 0 Remote 0 RTD 10 Set 1 0 Remote 10 Set 1 0 Remote 10 Set 1 0 Remote 10 Set 1 10 Set	About The set of the s	IEnP Deplay intensity 8 w	Manual Cantrol Manu Output Treat Integrand Data 0.4 Treat Relay and Data 0.4 Treat Frace ON Force ON O ON Force ON	
Setup	Per New PCPrrtisto Site Intern Avenue free PD7000 Setup C Personal 0 Remote 0 RTD 10 Set 1 10 Set 1 0 Remote 0 RTD 10 Set 1 0 Remote 10 Set 1 0 Remote 10 Set 1 0 Remote 10 Set 1 10 Set	About The set of the s	IEnP Deplay intensity 8 w	Manual Cantrol Manu Output Treat Integrand Data 0.4 Treat Relay and Data 0.4 Treat Frace ON Force ON O ON Force ON	
Setup	Per New PCPrrtisto Site Intern Avenue free PD7000 Setup C Personal 0 Remote 0 RTD 10 Set 1 10 Set 1 0 Remote 0 RTD 10 Set 1 0 Remote 10 Set 1 0 Remote 10 Set 1 0 Remote 10 Set 1 10 Set	About The set of the s	IEnP Deplay intensity 8 w	Manual Cantrol Manu Output Treat Integrand Data 0.4 Treat Relay and Data 0.4 Treat Frace ON Force ON O ON Force ON	
Setup	Per Mexic PCFortSet/ Stitle Tetrage Account frame PO70000 Setup O © PO70000 Setup O © RTD TCType O 100 cm 250 Setup Decimal Perior	About ns Man Daylay Seal Daylay Seal Daylay Solution Solutio	IEnP Deplay intensity 8 w	Marcal Croted Marcu Output Test Refer and Digital Cut. Test Prov. Dig Cut. From On Digital Cut. Test Prov. Dig Cut. From On O	
Setup	Per New PCPrrtisto Site Intern Avenue free PD7000 Setup C Personal 0 Remote 0 RTD 10 Set 1 10 Set 1 0 Remote 0 RTD 10 Set 1 0 Remote 10 Set 1 0 Remote 10 Set 1 0 Remote 10 Set 1 10 Set	About ns Man Daylay Seal Daylay Seal Daylay Solution Solutio	IEnP Deplay intensity 8 w	Manual Cantrol Manu Output Treat Integrand Data 0.4 Treat Relay and Data 0.4 Treat Frace ON Force ON O ON Force ON	
Setup	Per Mexic PCFortSet/ Stitle Tetrage Account frame PO70000 Setup O © PO70000 Setup O © RTD TCType O 100 cm 250 Setup Decimal Perior	Aloud Television of the second secon	IEnP Deplay intensity 8 w	Marcal Croted Marcu Output Test Refer and Digital Cut. Test Prov. Dig Cut. From On Digital Cut. Test Prov. Dig Cut. From On On On On On On On On On On On On On O	
Setup	Per Menter PCProtiseur Stitle Therein J. Anarcas free. PD72000 Setup © RTD There occurs © RTD To There occurs Deg C or F Occurs F or Concurs Occurs F occurs Occurs F occurs Other View Pro Monthton Meter View Pro Monthton	About 19 Man Darling Man Darling Sant Darling Eng Units Sant Darling Eng Units Sant Darling Eng Units Sant Darling Sant Manager Sant Manager Sa	IEnP Deplay intensity 8 w	Marcal Croted Marcu Output Test Refer and Digital Cut. Test Prov. Dig Cut. From On Digital Cut. Test Prov. Dig Cut. From On On On On On On On On On On On On On O	
Setup	Per Meeter/View Pro Monitor Meeter/View Pro Monitor Meeter/View Pro Monitor	About 19 Man Darling Man Darling Sant Darling Eng Units Sant Darling Eng Units Sant Darling Eng Units Sant Darling Sant Manager Sant Manager Sa	IEnP Deplay intensity 8 w	Marcal Croted Marcu Output Test Refer and Digital Cut. Test Prov. Dig Cut. From On Digital Cut. Test Prov. Dig Cut. From On On On On On On On On On On On On On O	



Relays

PD7000 PROVU[®] Dual-Line 6-Digit Temperature Meter

FIELD EXPANSION MODULES

Add functionality to the PROVU in the field with easy-to-install external expansion modules. Add RS-232 or RS-422/485 communications, I/O modules (up to 2), and 4-relay expansion module. The menu items for these modules do not appear until the module is connected, simplifying the basic menu. Relay and digital I/O modules are shown below with optional DIN rail mounting kit, P/N PDA1002.



PDA1044 I/O Expansion Module

Four digital inputs and four digital outputs are available per expansion module. The PROVU meter will accept two of these modules. External digital inputs can function similarly to the front panel function keys or on-board digital input F4. They can be configured to trigger certain events (i.e. acknowledge/ reset alarms, reset max and/or min values, disable/enable all output relays, and hold current relay states), provide direct menu access point, or mimic front panel keys. The I/O module can be used to configure the PROVU remotely, in essence giving the user control of the four front panel push buttons. This feature is particularly useful if the meter is mounted inside an explosion-proof enclosure.

Digital outputs can be used to remotely monitor PROVU's alarm relay output states, or the states of a variety of actions and functions executed by the meter.

PDA1004 Relay Expansion Module

An external module containing four 3 A Form A (SPST) relays can be added to the PROVU at anytime. Removable screw terminal blocks accept 12 to 22 AWG wire.



PDA1232 & PDA1485 Communication Modules

Serial communications on the PROVU can be added anytime with external PDA1232 (RS-232) or PDA1485 (RS-485) communication adapters.

Free Modbus protocol included for use with PRoVU serial communications modules.

OUTPUTS



Relay Outputs

The PROVU has up to four 3 A Form C relays (SPDT) with multiple power loss fail-safe options. Relays can be configured for proper protective action upon input loop break. Relay ON and OFF delay times are user adjustable. Up to eight front panel indicators show alarm and/or relay state. All relays can be configured for 0-100% deadband.

Relay Operation/Configuration

There are powerful relay functions that can be configured in the PROVU meter, including:

- Automatic reset only (non-latching)
- · Automatic + manual reset at any time (non-latching)
- · Latching (manual reset only)
- Latching with clear (manual reset only after alarm condition has cleared)
- · User selectable fail-safe operation
- Relay action upon sensor break
- · Time delay (on and off), independent for each relay
- Manual control mode
- · Interlock relay mode

Front panel button or digital input may be assigned to acknowledge relays programmed for manual reset.

Analog Output

The isolated analog retransmission signal can be configured to represent the measured temperature (including average temperature), maximum or minimum temperature, any of the eight relay set points, manual control setting, or Modbus input. While the output is nominally 4-20 mA, the signal will accurately accommodate under- and over-ranges from 1 to 23 mA. A power supply (24 V @ 40 mA) is standard with the 4-20 mA output option.

Manual Output Control

 
Take control of any output with this feature. All relays can be forced ON or OFF, and the 4-20 mA output signal can be set to any value within its range. When the relays and 4-20 mA output are



controlled manually, an LED labeled "M" is turned on and the associated Alarm LEDs (1-8) flash every 10 seconds indicating that the meter is in manual control mode.

Interlock Relay(s)

This function allows a process to use one or more very low voltage input signals or simple switch contacts to control the state of one or more internal "interlock" relays. A violation (i.e. loss of input, open switch, or open circuit) forces one or more N/O interlock relay contacts to open. One input can be used in series with a number of interlock switches, or up to eight inputs can be required to force-on one (or more) internal interlock relays. Please see Application Note AN-1008 on our website for more information. Requires PDA1044 Digital I/O module or use of on-board digital input F4.



www.predig.com

NEMA 4 & 4X FIELD ENCLOSURES

Thermoplastic and stainless steel NEMA 4X, and painted steel NEMA 4 enclosures for up to 10 PROVU meters are available. See our complete offering at www.predig.com/esu

PROTEX-MAX EXPLOSION-PROOF



All the proven features of the PROVU brought into your hazardous areas! Go to www.predig.com/pd8


PD8-7000 ProtEX-MAX Explosion-Proof

4-20 mA Output

Powered by PROVU

CONNECTIONS


- · Form C (SPDT) relays
- · Isolated supply available even on 12/24 VDC input power models
- · Removable terminal blocks
- 2 or 4 relays + isolated 4-20 mA output option

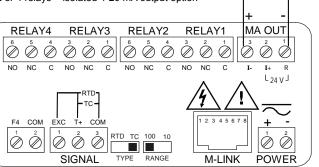

Universal 85-265 VAC or 12/24 VDC input power

- Thermocouple or RTD inputs
- M-Link for adding expansion modules

DIMENSIONS

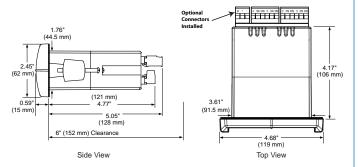

Notes:

- 1. Panel cutout required: 1.772" x 3.622" (45mm x 92mm)
- 2. Panel thickness: 0.040 0.250" (1.0mm 6.4mm)
- 3. Mounting brackets lock in place for easy mounting
- 4. Clearance: Allow 6" (152 mm) behind the panel

SPECIFICATIONS

Except where noted all specifications apply to operation at +25°C.

General

Display: Upper display: 0.60" (15 mm) high. Lower display: 0.46" (12 mm) high. Both are 6 digits (-99999 to 999999), red LEDs. Resolution: 1° (up to four digits) or 0.1° (up to five digits) Display Intensity: Eight intensity levels Display Update Rate: 5/second (200 ms) Front Panel: NEMA 4X, IP65 Programming Methods: Four front panel buttons, digital inputs, PC and MeterView Pro software, Modbus registers, or cloning using Copy function. F4 Digital Input Contacts: 3.3 VDC on contact. Connect normally open contacts across F4 to COM. F4 Digital Input Logic Levels: Logic High: 3 to 5 VDC Logic Low: 0 to 1.25 VDC Noise filter: Programmable from 2 to 199 (0 will disable filter) Filter Bypass: Programmable from 0.1 to 99.9% of span Recalibration: Recommended at least every 12 months. Max/Min Display: Max / min temperature readings are stored until reset by the user or until power to the meter is cycled. Non-Volatile Memory: All programmed settings are stored in nonvolatile memory for a minimum of ten years if power is lost. Power Options: 85-265 VAC 50/60 Hz, 90-265 VDC, 20 W max, or optional model with 12-24 VDC ±10%, 15 W max. Normal Mode Rejection: Greater than 65 dB at 50/60 Hz Isolation: 4 kV input/output-to-power line. 500 V input-to-output Environmental: Operating temperature range: -40 to 65°C Storage temperature range: -40 to 85°C Relative humidity: 0 to 90% non-condensing Connections: Removable screw terminal blocks accept 12 to 22 AWG wire. RJ45 for external relays, digital I/O, and serial communication adapters. Enclosure: 1/8 DIN, high impact plastic, UL 94V-0, color: black (92 mm x 45 mm). Two panel mounting bracket assemblies are provided. Dimensions: 4.68" x 2.45" x 5.64" (119 mm x 62 mm x 143 mm) (W x H x D) Weight: 9.5 oz (269 g) UL File Number: UL & c-UL Listed, E160849: 508 Industrial Control Equipment. Warranty: 3 years parts & labor USB Connection: Compatibility: USB 2.0 Standard, Compliant Connector Type: Micro-B receptacle

Cable: USB A Male to Micro-B Cable

Driver: Windows 98/SE, ME, 2000, Server 2003/2008, XP 32/64-Bit, Vista 32/64-Bit, Windows 7 32/64-Bit, Windows 10 32/64-Bit Power: USB Port

Temperature Input

Inputs: Thermocouple J, K, T, E, R, S, B, N, C; RTD 100 Ω platinum (0.00385 & 0.00392 curves), 10 Ω copper, 120 Ω nickel, 1000 Ω platinum **Input Impedance:** Greater than 100 k Ω

Offset Adjust: User programmable offset adjust ±50.0 degrees Temperature Drift: ±2°C maximum from 0 to 65°C ambient temperature; ±4°C maximum from -20 to 0°C ambient temperature

Sensor Break: Display flashes "Open", relays can be programmed to go "On", "Off", or to "Ignore" (detected as an upscale condition). Averaging: Up to 10 RTDs connected in parallel can be averaged. Accuracy & Range: See table below.

Туре	Range (°F)	Range (°C)	Accuracy
J	-200 to 2000	-129 to 1093	±1°C
K	-200 to 2400	-129 to 1316	±1°C
Т	-200 to 752	-129 to 400	±1°C
E	-200 to 1800	-129 to 982	±1°C
R	-50 to 3000	-46 to 1649	±2°C
S	-50 to 3000	-46 to 1649	±2°C
В	752 to 3300	400 to 1816	±2°C
N	-100 to 2300	-73 to 1260	±2°C
С	32 to 4100	0 to 2260	±2°C
10 Ω	-328 to 500	-200 to 260	±0.1°C
100 Ω	-328 to 1562	-200 to 850	±0.4°C
120 Ω	-110 to 500	-79 to 260	±0.1°C
1000 Ω	-328 to 900	-200 to 482	±0.4°C

PRECISION DIGITAL

PD7000 PROVU[®] Dual-Line 6-Digit Temperature Meter

Relays

Rating: 2 or 4 SPDT (Form C) internal and/or 4 SPST (Form A) external; rated 3 A @ 30 VDC and 125/250 VAC resistive load; 1/14 HP (\approx 50 watts) @ 125/250 VAC for inductive loads such as contactors, solenoids, etc. **Noise Suppression:** Noise suppression is recommended for each relay contact switching inductive loads.

Deadband: 0-100% of span, user programmable

High or Low Alarm: User may program any alarm for high or low trip point. Unused alarm LEDs and relays may be disabled (turned off). **Relay Operation:** automatic (non-latching), latching (requires manual acknowledge), sampling (based on time), pump alternation control (2 to 8 relays), Off (disable unused relays and enable interlock feature, manual on/off control mode).

Time Delay: 0 to 999.9 seconds, on & off relay time delays. Programmable and independent for each relay.

Fail-Safe Operation: Programmable and independent for each relay. *Note: Relay coil is energized in non-alarm condition. In case of power failure, relay will go to alarm state.* **Auto Initialization:** When power is applied to the meter, relays will reflect the state of the input to the meter.

Isolated 4-20 mA Transmitter Output

Output Source: PV (temperature), max, min, set points 1-8, manual control setting, or Modbus input

Scaling Range: 1.000 to 23.000 mA for any display range

Calibration: Factory calibrated 4-20 mA output

Accuracy: ± 0.1% of span ± 0.004 mA

Temperature Drift: 0.4 µA/°C max from 0 to 65°C ambient,

0.8 $\mu A/^\circ C$ max from -40 to 0°C ambient

Note: Analog output drift is separate from input drift.

Isolated Transmitter Power Supply: Terminals I+ & R: 24 VDC ± 10%. Isolated from the input at >500 V. May be used to power the 4-20 mA output or other devices. All models rated @ 40 mA max. **External Loop Power Supply:** 35 VDC maximum

Output Loop Resistance:

Power supply	Minimum	Maximum
24 VDC	10 Ω	700 Ω
35 VDC (external)	100 Ω	1200 Ω

Serial Communications

Protocol: Modbus® RTU Meter Address/Slave ID: 1 - 247 Baud Rate: 300 - 19,200 bps Transmit Time Delay: Programmable between 0 and 199 ms or transmitter always on for RS-422 communication Data: 8 bit (1 start bit, 1 or 2 stop bits) Parity: Even, odd, or none with 1 or 2 stop bits Byte-to-Byte Timeout: 0.01 - 2.54 seconds Turn Around Delay: Less than 2 ms (fixed) Note: Refer to the PROVU[®] Modbus Register Tables located at www.predig.com for details.

Digital I/O Expansion Module

Channels: 4 digital inputs & 4 digital outputs per module System: Up to 2 modules for a total of 8 inputs & 8 outputs Digital Input Logic: High: 3 to 5 VDC Low: 0 to 1.25 VDC Digital Output Logic: High: 3.1 to 3.3 VDC Low: 0 to 0.4 VDC Source Current: 10 mA maximum Sink Current: 1.5 mA minimum +5 V Terminal: To be used as pull-up for digital inputs only.

4-Relay Expansion Module

Relays: Four Form A (SPST) rated 3 A @ 30 VDC and 125/250 VAC resistive load; 1/14 HP (≈ 50 watts) @ 125/250 VAC for inductive loads.

ORDERING INFORMATION

PROVU [®] PD7000 • Standard Models		
85-265 VAC Model	12-24 VDC Model	Options Installed
PD7000-6R0	PD7000-7R0	None
PD7000-6R2	PD7000-7R2	2 Relays
PD7000-6R3	PD7000-7R3	4-20 mA Output
PD7000-6R4	PD7000-7R4	4 Relays
PD7000-6R5	PD7000-7R5	2 Relays & 4-20 mA Output
PD7000-6R7	PD7000-7R7	4 Relays & 4-20 mA Output

PROVU[®] PD7000 • SunBright Display Models

85-265 VAC Model	12-24 VDC Model	Options Installed
PD7000-6H0	PD7000-7H0	None
PD7000-6H2	PD7000-7H2	2 Relays
PD7000-6H3	PD7000-7H3	4-20 mA Output
PD7000-6H4	PD7000-7H4	4 Relays
PD7000-6H5	PD7000-7H5	2 Relays & 4-20 mA Output
PD7000-6H7	PD7000-7H7	4 Relays & 4-20 mA Output

Accessories		
Model	Description	
PDA1002	DIN Rail Mounting Kit for Two Expansion Modules	
PDA1004	4-Relay Expansion Module	
PDA1044	4 Digital Inputs & 4 Digital Outputs Module	
PDA1232	RS-232 Serial Adapter	
PDA1485	RS-422/485 Serial Adapter	
PDA7485-I	RS-232 to RS-422/485 Isolated Converter	
PDA7485-N	RS-232 to RS-422/485 Non-Isolated Converter	
PDA8232-N	USB to RS-232 Non-Isolated Converter	
PDA8485-I	USB to RS-422/485 Isolated Converter	
PDA8485-N	USB to RS-422/485 Non-Isolated Converter	
PDX6901	Suppressor (snubber): 0.01 $\mu\text{F}/470~\Omega,$ 250 VAC	

Your Local Distributor is:



46, Jalan SS 22/21, Damansara Jaya, 47400 Petaling Jaya, Selangor Darul Ehsan, Malaysia.

Email: nog@nog.com.my Web access: http://www.nog.com.my

Disclaimer

The information contained in this document is subject to change without notice. Precision Digital Corporation makes no representations or warranties with respect to the contents hereof, and specifically disclaims any implied warranties of merchantability or fitness for a particular purpose. ©2010-2016 Precision Digital Corporation. All rights reserved.



PRECISION DIGITAL CORPORATION